

## Overview of Functions/Codes (Alphabetical)

The table below lists all available functions as they appear on the display. Functions that have been configured (contact your service personnel) can be activated interactively (select + save) via the Program/Service menu (select + save or enter a code), or by pressing function keys, provided that the functions have been configured (contact your service personnel).

Functions (display)	... Interactively	... Via the Program/Service menu		... With function keys
			Code	
				
Account code		✓	*60	X
Advisory msg. on	✓	✓	*69	X
Advisory msg. off	✓	✓	#69	X
Associated dial		✓	*67	X
Associated serv.		✓	*83	X
Call waiting	✓	✓	*55	X
Waiting tone off	✓	✓	*87	X
Waiting tone on	✓	✓	#87	X
Call wait.term.on		✓	*490	X
Call wait.trm.off		✓	#490	X
Caller List	✓	✓	#82	X
Save number	✓	✓	*82	X
Changeover on	✓	✓	*66	X
Changeover off	✓	✓	#66	X
Change PIN		✓	*93	
Conference	✓	✓	*3	X
Start conference	✓			
Adding a party to the conference	✓			
End conference	✓	✓	#3	
View conf parties	✓			
Remove party	✓			
Drop last conf. party (only for U.S., not for HiPath 500)	✓		*491	
Consult	✓			
Return to held call	✓	✓	*0	
Quit and return	✓	✓	*0	
Transfer/US:Accept call UK:Accept	✓			
Control Relay On (not for HiPath 500)		✓	*90	X
Control Relay Off (not for HiPath 500)		✓	#90	X
US:Directory UK:Phonebook			*54	X
1=internal	✓		*54	X
2=LDAP (not for HiPath 500)	✓			
DISA				
Internal DISA (not for HiPath 500)	✓	✓	*47	X
En-bloc sending				

Dial	✓			
DND on	✓	✓	*97	X
DND off	✓	✓	#97	X
Door opener on		✓	*89	X
Door opener off		✓	#89	X
DTMF dialing		✓	*53	X
Forwarding on	✓	✓	*1	X
1=all calls	✓	✓	*11	X
2=external calls only	✓	✓	*12	X
3=internal calls only	✓	✓	*13	X
Forwarding off	✓	✓	#1	X
Trunk FWD on	✓	✓	*64	X
Trunk FWD out	✓	✓	#64	X
Forward Line: On	✓	✓	*501	X
Forward Line: Off		✓	#501	X
Headset				X
Answer call	✓			
HF answerback on	✓	✓	*96	X
HF answerback off	✓	✓	#96	X
Hotline				
Join hunt group	✓	✓	*85	X
Leave hunt group	✓	✓	#85	X
Rejoin all groups	✓	✓	*85*	X
Leave all groups	✓	✓	#85#	X
Lock all phones		✓	*943	X
Monitoring	✓	✓	*944	
Mute on	✓	✓	*52	X
Mute off	✓	✓	#52	X
Night answer on	✓	✓	*44	X
Night answer off	✓	✓	#44	X
Open door		✓	*61	X
Override	✓	✓	*62	X
Page (not for HiPath 500)		✓	*45	X
Answer page (not for U.S.)		✓	#45	X
Park a call		✓	*56	X
Retrieve call		✓	#56	
Phone Test		✓	*940	
Pickup - directed	✓	✓	*59	X
Pickup - group	✓	✓	*57	X
Accept call				
Prog. feature key		✓	*91	X
Redial				X
Reject call				

Release				X
Relocate	✓	✓	*9419	X
Complete Relocate	✓	✓	#9419	
Reserve trunk	✓			X
Reset services		✓	#0	X
Retrieve line		✓	*63	X
Ring Transfer: On		✓	*502	X
Ring Transfer: Off		✓	#502	X
Ringer cutoff on	✓	✓	*98	X
Ringer cutoff off	✓	✓	#98	X
Ringing group on		✓	*81	X
Ringing group off		✓	#81	X
Room monitor		✓	*88	X
Select language		✓	*48	
Send message	✓	✓	*68	X
View sent message	✓	✓	#68	X
US: View messages UK: Display Messages	✓	✓	#68	X
Mailbox				X
Keypad dialing		✓	*503	
Shift Key				X
Show call charges (own telephone)		✓	*65	X
View call charges (other party's telephone)				X
Speaker call		✓	*80	X
Suppress call ID	✓	✓	*86	X
Restore caller ID	✓	✓	#86	X
Tel. data service (not for HiPath 500)			*42	
Temporary MSN (not for U.S.)	✓	✓	*41	X
Temporary Phone		✓	*508	X
Timed reminder on		✓	*46	X
Timed reminder off		✓	#46	X
Toggle/Connect	✓	✓	*2	X
Trace call		✓	*84	X
Transfer	✓			
Trunk Flash (not for HiPath 500)		✓	*51	X
UCD				
Log on		✓	*401	X
Log off		✓	#401	X
Available		✓	*402	X
Not available		✓	#402	X
Work on		✓	*403	X
Work off		✓	#403	X
UCD night on		✓	*404	X
UCD night off		✓	#404	X
Calls in queue		✓	*405	X

		✓		
US:Callback UK:Set Callback	✓	✓	*58	X
View callbacks/Delete	✓	✓	#58	
Use speed-dialing		✓	*7	X
Change Speed-dial (station)		✓	*92	X

optiPoint 500 economy/basic/standard/advance - HiPath 500/3000/5000 V5.0, User Guide, Issue 8  
P31003H1012C121027619 2005-09-20

[up](#)   
© Siemens AG 2005